



INSTRUCTION SHEET

Parkview™



You've made a great choice in adding Parkview™ Waste & Recycling Containers to your site, with the ideal balance of sophistication and durability. Follow the instructions below for assembly.


ASSEMBLY STEPS

SUPPLIED PARTS:


- 1 – Lid (Styles vary, Security Cable attached)
- 1 – Liner
- 1 – Waste Container Base
- 2 – Wedge Bolts
- 1 – Decal Set

TOOLS REQUIRED:


- 7/16" Drill Bit
- 13mm Socket/Wrench
- Hammer

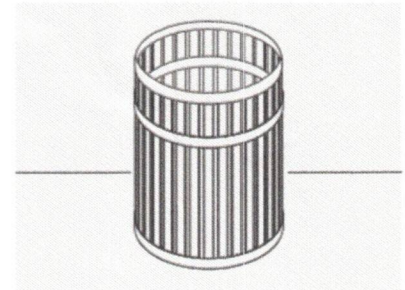


1. Unpack the assembled base and lid. Move the base into desired location. Remove lid and liner. NOTE: If not mounting to concrete, proceed to step 5.

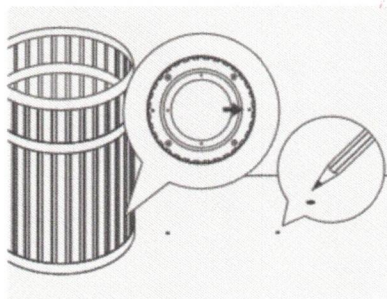


2. MOUNTING TO CONCRETE: Use pencil to trace and mark locations on concrete of mounting holes on bottom of unit.

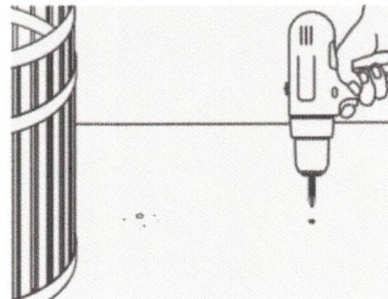


3. Set unit aside. Using power drill and concrete bit to 7/16" holes into the concrete. Depth of holes should be 2 1/2".

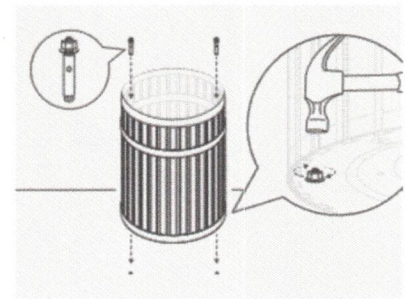


4. Align unit over the holes and insert supplied wedge bolts (supplied with unit, taped to the liner handle) through unit into holes in concrete. Tap down as necessary and tighten.

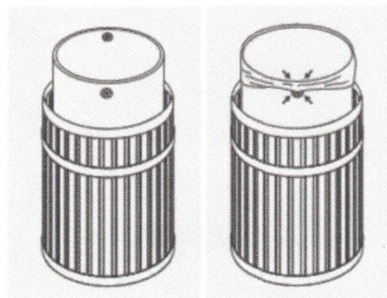

5. Replace liner in base. Insert bag through rubber hole to keep bag secure.

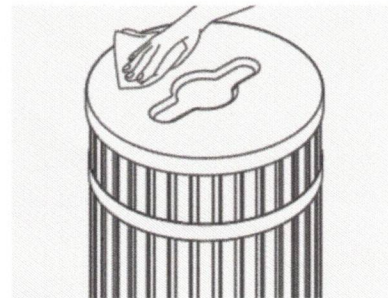

6. Place lid on base. For best results when applying the decals, we recommend wiping the surface with isopropyl alcohol and let dry.

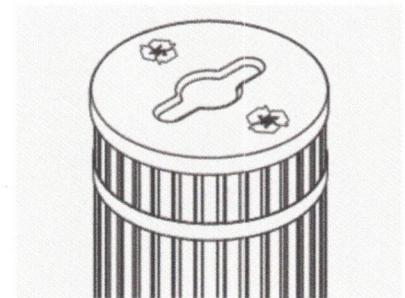

7. Remove desired label from the decal set. Select location and rub firmly into place.